



Dimensions

Mounting options Inbuilt

Dimensions 80 / 16 / 30 mm

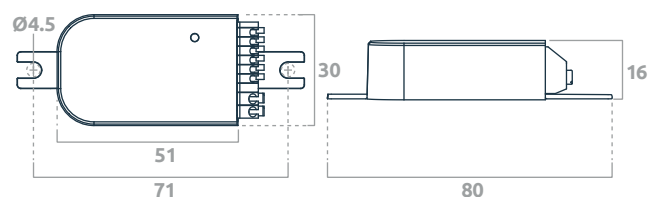

Wireless system overview

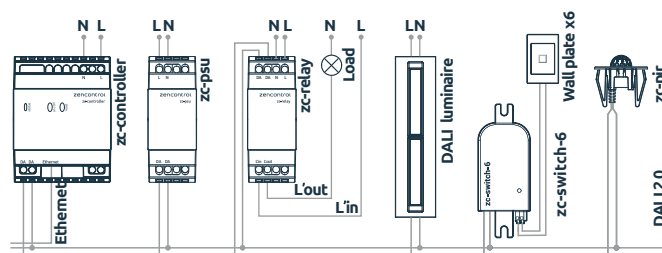


Installation

Remove the product from the box and inspect it for any damage. If you believe the product to be damaged or otherwise unsound, **do not** install the product. Please pack it back into its box and return it to the place of purchase for replacement.

If the product is satisfactory, proceed with the installation:

- 1 Ensure safety warnings are adhered to.
- 2 Connect the two DALI terminals to the DALI line ensuring wiring regulations are followed. DALI is not polarised. DALI is not SELV and as such must be treated as LV. **Do not connect the switch to any mains voltages.**
- 3 Connect the momentary switch(es) to the floating contact inputs. Only connect one momentary switch per input. **Do not** connect momentary input to mains voltage.
- 4 Install switch behind the wall-plate or mounting enclosure for momentary switch.

Wiring diagram

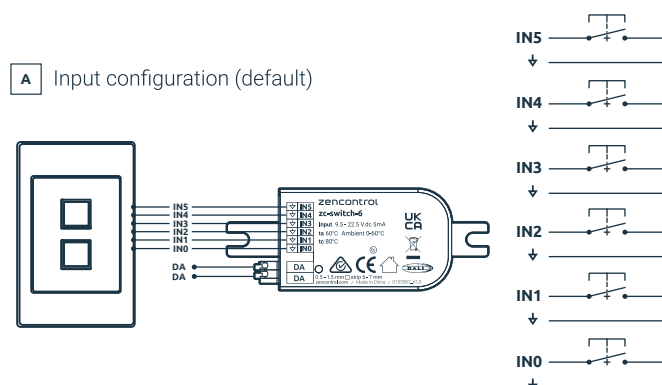

Product range

Order code	Description
zc-switch-6	DALI-2 switch module, 6 input

Specifications

Supply voltage	9.5 - 22.5 V (DALI line)
Control system	DALI-2
Supply current	5 mA
Input	6 floating dry contacts <i>Note: Any switch used shall be LV rated</i>
Wiring DALI	0.5 - 0.75 mm ² Strip 6 - 7 mm (supplied with 100mm flylead)
Wiring switches	Supplied with 6 pairs of 100mm 0.5mm ² flyleads
Operating temperature	0 to 45°C
Material	PC
Mounting	Inbuilt
Ingress protection	IP20
Compliance standards	IEC 61347-2-11 CISPR 15 IEC 62386-301 EMC-2004/108/EC LVD-2006/95/EC

Safety information

- This product must only be installed by a licensed electrician.
- Before commencing installation turn off and isolate the electrical supply.
- There are no user serviceable parts, attempting to service any part of the product will void the warranty
- DALI is not SELV and as such should be treated as LV.
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for the relevant rules.
- When the installation is complete, leave this manual with the building's owner for future reference.